



SUBMITTAL SHEET

Product(s): Trim-Tex 847 Adhesive

Description: 847 Spray Adhesive is a high tack, pressure sensitive spray adhesive specifically designed and tested by our engineers to be used with Trim-Tex vinyl beads.

Advantages: 847 Spray Adhesive is designed to give a strong bond while maintaining a workable open time so beads can be accurately positioned. Will not bleed through taping compound or paint. Once dry, product is inert. Trim-Tex 847 is a must for installing expansion products such as Magic Corner, Hideaway Expansion and 093V Expansion.

Limitations: Product is designed for interior use. See installation instructions below.

Applicable Standards: Trim-Tex 847 Spray Adhesive meets California VOC content limits. (VOC content is less than 55% by weight) See MSDS for additional information.


Installation: Shake well before use. Apply to a clean surface. Point valve toward surface and spray from a distance of 6 to 10 inches. Keep can moving to avoid a buildup of spray on the surface. Apply 847 spray to the drywall and then to the bead. The adhesive must still be wet to allow you to position the bead. If adhesive dries and is no longer tacky the adhesive will not bond properly. Respray both surfaces. Once in position, pressure the mud legs of the bead to the wall using the 0930 tool shown to the left or the handle of your taping knife. Allow the adhesive to tack and go back a second time to pressure the legs. Staple mud legs every 6-8" with 1/2" long divergent staples.

Accessories: Mud-Max, Divergent Staple Guns and Staples, 930 Installation Tool.

Job Name _____

Contractor _____ Date _____

Approvals (Signatures or Stamps)

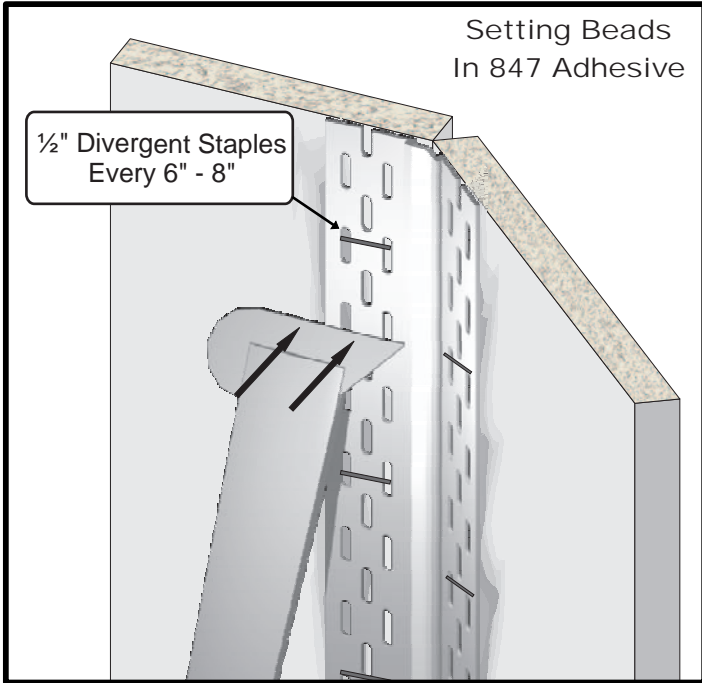

847

SPRAY ADHESIVE