

BUTTBOARD™

A Product of Buttboard™ Inc

Master Distributer:



Buttboard™ is a drywall backing system that reduces but joint installation and finishing costs.

- Installation Labor Savings 20%
- Finishing Labor Savings 50%
- Sanding Labor Savings 50%
- Finishing Material Savings 50%
- Drywall Material Waste Reduction 50%

Buttboard™ Nominal Overall Dimensions


#825 - 48" Buttboard™ - width 6", length 48"

#826 - 54" Buttboard™ - width 6", length 54"

Buttboard™ consists of:

- 3/8" x 6" x 48" or 54" Formaldehyde free premium density, OSB board
- 5" wide 1/16" deep centered machined out area for entire face length
- Screw holding 400lb.

INSTALLATION INSTRUCTIONS

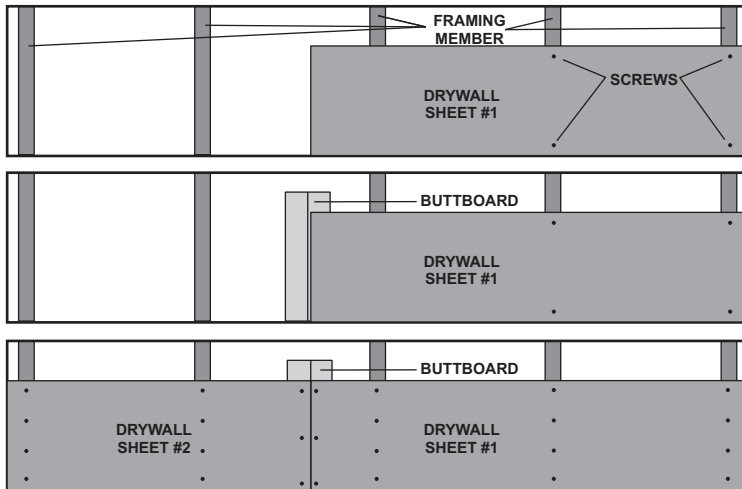

1. Install first sheet of drywall with butt end centered between framing members. Install screws in surround of drywall sheet, except for framing members closest to butt end.

2. Center BUTTBOARD™ on backside of drywall butt joint with machined groove facing the backside of drywall. Install screws every 8-12 inches, one inch back from drywall butt edge.


3. Butt end of second drywall sheet to end of first sheet. (Do not compress butt joint). Install screws into surround of drywall sheet except for framing member closest to butt joint.

4. Firmly push butt end of second sheet into BUTTBOARD™ and install screws every 8-12", one inch back from butt edge.

5. Finish screwing both sheets of drywall to framing members.

6. Screws can also be installed through adjoining drywall sheet into overlapping BUTTBOARD™

7. Tape and mud the butt joint. To improve the strength and workability of your drywall compound, we recommend you use Trim-Tex Mud-Max, stock # 850.

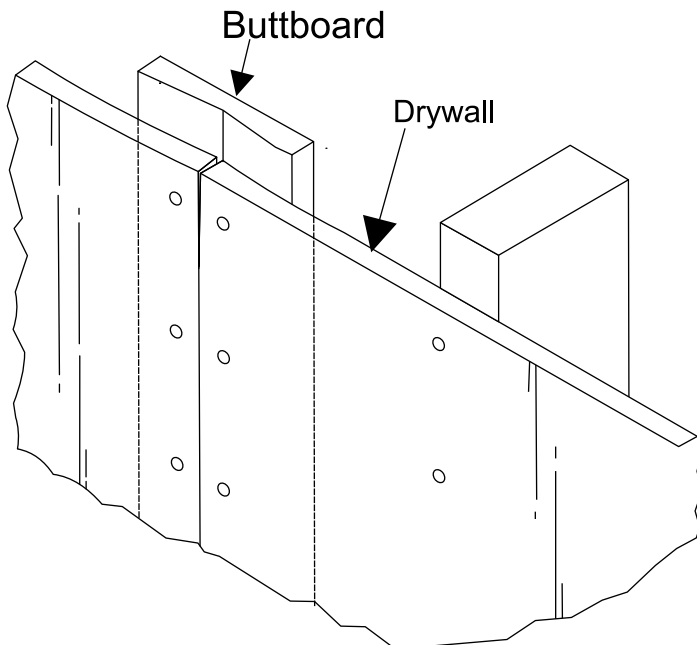

Job Name _____

Contractor _____ Date _____

Approvals (Signatures or Stamps)