



SUBMITTAL SHEET

MUD SET BEADS

Product(s): Trim-Tex Rigid Vinyl Mud Set Beads

Description: Trim-Tex Mud Set Beads are available in a variety of standard and decorative shapes that include 3/4" R. Bullnose, Adjustable Splayed Bullnose, Rigid Corner Bead, Rigid Jumbo Corner Bead, Adjustable Splayed Corner and Adjustable Inside Corner.

Advantages: Made from rust proof, dent resistant PVC to reduce jobsite and handling damage. Trim-Tex Mud Set Beads feature patented Mud Lock Technology with 350% more bonding surface. The Mud Set Beads will not dent or blister and absorbs extreme impact. The engineered hole pattern allows excess mud to flow through and quickly self level, saving time and money. Mud Set Beads are not covered in paper and do not promote mold growth. Mud Lock Technology assures no cracks or call backs and is compatible with most hoppers and roller tools.

Limitations: Product is designed for interior use and is to be installed with high quality drywall mud/compounds. Do not install with spray adhesives, staples, nails or screws. Do not thin out your mud like you would for paper faced beads. Trim-Tex's micro perforation hole design allows thick mud to spread out evenly. We recommend mixing your mud first and testing before adding water.


Applicable Standards: Rigid PVC products made by Trim-Tex meet ASTM specifications D3678-97, D1784-03, C1047-99 and achieve a Class A rating for flame spread and smoke developed when tested under ASTM E84-10.

Surface Characteristics: Trim-Tex products are made from PVC. PVC does not support combustion and is self extinguishing when the source of flame or heat is removed.

Installation: Set back the drywall for outside corners if required. Install Molded Corners and/or Bull Adapters if required first. Snip the bead to length and dry fit. Run your bead through a hopper to coat the under side of the bead with mud/compound or you can trowel or box a layer of mud/compound onto the drywall corner. Place your corner bead onto the mudded corner and press down with a mud knife or rolling tool. Wipe off the excess mud and finish mudding. Detailed installations instructions are included with each product.

Finishing: First coat of mud can be applied immediately. Finish mudding, sanding and painting as you normally would. Priming is not required. Always use a high quality paint. For ultimate bond, add Mud-Max to all coats of mud.

Accessories: Mud Set 3/4" R. Bullnose Corner Beads match all existing 2 Way & 3 Way Molded Corners & Bull Adapters. Other Accessories include Trim-Tex Sanding Blocks & Abrasive Products, Mud-Max Drywall Compound Additive

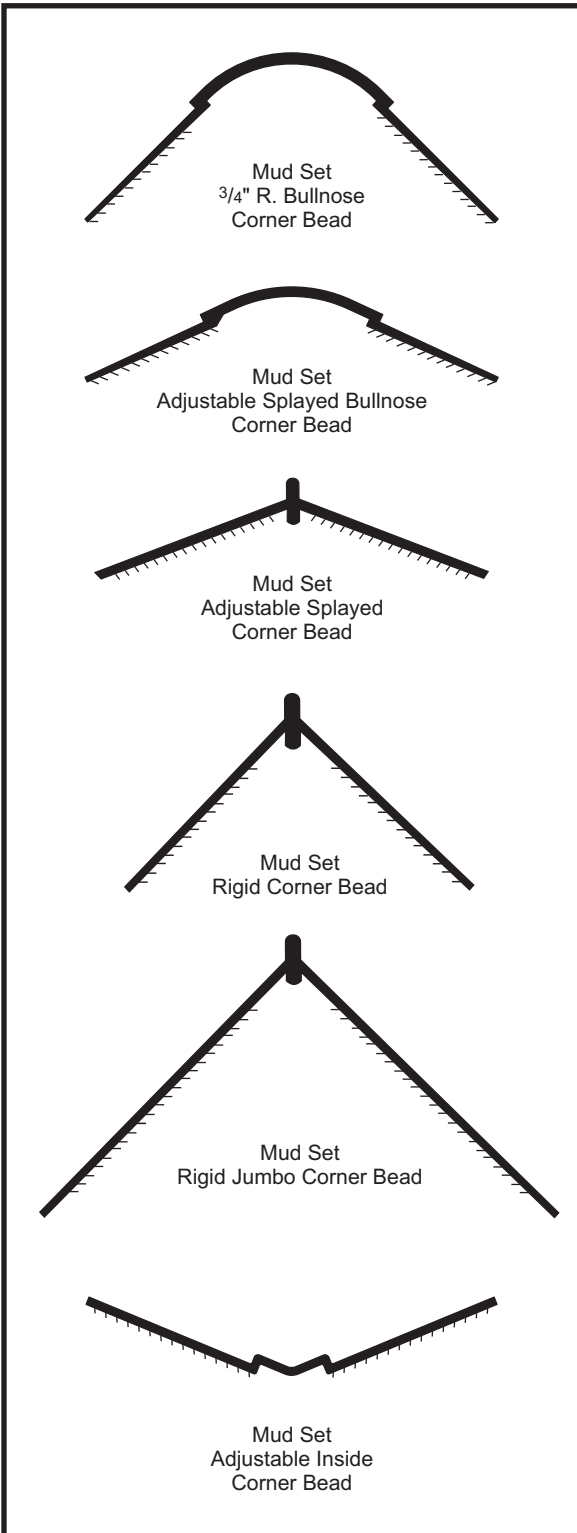

Job Name _____

Contractor _____ Date _____

Approvals (Signatures or Stamps)