

# TRIM-TEX

## DRYWALL PRODUCTS

### Fast Edge

Fast Edge features a sharp nose with no mud bump, and tapered legs to significantly reduce mud usage and drastically speed up installation time. The nose also acts as a hinge to accommodate framing variances. With no holes, Fast Edge cuts down installation and finishing time significantly, and the patented mud locks keep the corner held firmly in place without the need of staples or adhesives.


### Installation Instructions

**Step 1:** Apply compound to Fast Edge with a hopper or to the drywall corner using a blade or compound tube.

**Step 2:** Place bead onto the corner and pressure into place using a Trim-Tex #460 Pro Series Quad Roller.

**Step 3:** Wipe the surface of Fast Edge to clean excess mud. Then use a 6" knife and blade on the fill coat.

**Step 4:** When dry, apply final coat with a 6" box or hand apply with an 8" knife.

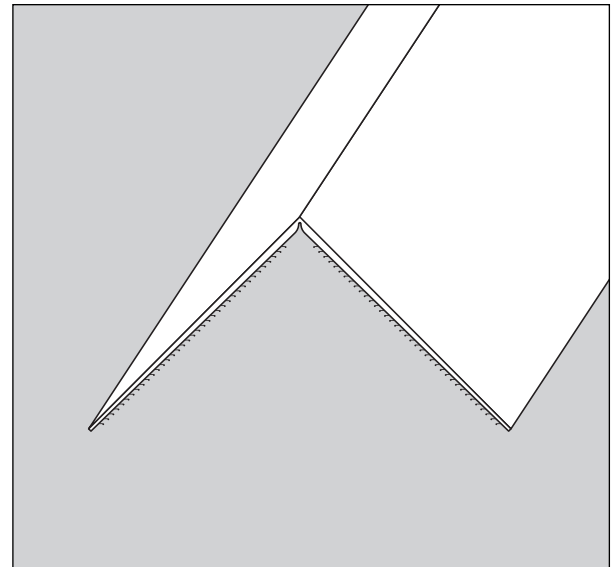

STOCK #	NAME	PCS/BOX
FE08	FAST EDGE 8'	50
FE09	FAST EDGE 9'	50
FE10	FAST EDGE 10'	50

