

# TRIM-TEX


## DRYWALL PRODUCTS

### Architectural Reveal Bead

Create reveal details in walls that allow for up to 1/8" expansion control.

### Installation Instructions

- Step 1:** Measure and cut the bead to length. Dry fit to test proper cut and channel width.
- Step 2:** Spray the bead and edges of wall channel with 1 coat each of Trim-Tex 847 Spray Adhesive and position the bead into place.
- Step 3:** Once in position, pressure the leg using a Trim-Tex installation tool or the handle of your taping knife.
- Step 4:** Staple the mud leg into place every 6"-8" with 1/2" staples.
- Step 5:** Mud as usual. Be sure to use All-Purpose or Multi-Purpose Compound. Add Mud-Max to your drywall compound for extra durability. Prime and paint as usual.

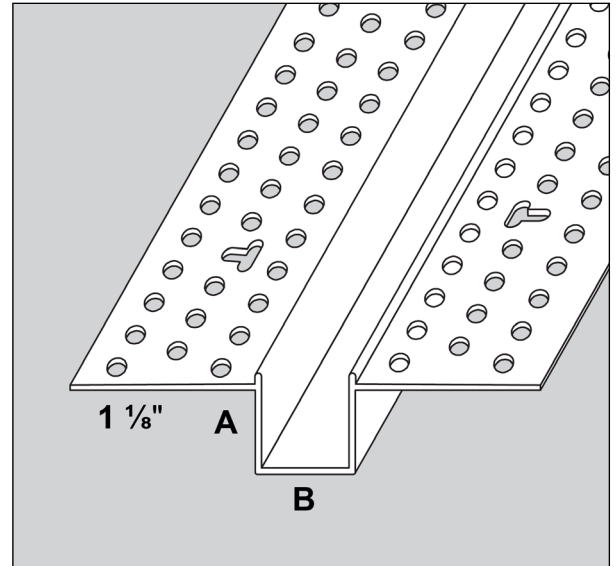

STOCK #	NAME	PCS/BOX
AS5110	AS 1/2" x 1/2" REVEAL 10'	20
AS5150	AS 1/4" x 1/4" REVEAL 10'	25
AS5160	AS 1/2" x 1/4" REVEAL 10'	20
AS5170	AS 1/4" x 3/4" REVEAL 10'	15
AS5210	AS 1/2" x 3/4" REVEAL 10'	15
AS5310	AS 1/2" x 1" REVEAL 10'	15
AS5320	AS 5/8" x 1/2" REVEAL 10'	15
AS5325	AS 5/8" x 5/8" REVEAL 10'	15
AS5330	AS 5/8" x 3/4" REVEAL 10'	15
AS5340	AS 5/8" x 1" REVEAL 10'	12
AS5350	AS 5/8" x 2" REVEAL 10'	10

\*SIZES LISTED AS A X B

