

# TRIM-TEX

## 093V Expansion Joint

### Installation Instructions

#### Product Overview

The Trim-Tex 093V Rigid PVC Expansion Joint features a co-extruded flexible PVC center that provides a full  $\frac{3}{8}$ " of protection against the stresses of expansion and contraction. The 093V's patented tear off strips act as a guide for your taping knife, and protect the center from mud, making cleanup a breeze. 093V is easier to use than any control joint that comes with removable tape.

**MUST PROVIDE BACKING FOR FIRE RATING. CHECK WITH ARCHITECT OR LOCAL CODES.**

#### Installation Instructions


For long runs, it may be helpful to snap a chalk line as a guide for the 093V Expansion.

Maintain a  $\frac{1}{4}$ " gap in the V for optimal operation. To install the bead, cut the bead to length. Spray the bead and then the drywall with Trim-Tex 847 Spray Adhesive. Immediately apply to the drywall.


Once in position, press the legs into place using the free installation tool or handle of your taping knife.

Staple both legs every 6"-8" with  $\frac{1}{2}$ " staples. To boost the performance and strength of your drywall compound, use Trim-Tex's high performance MUD-MAX drywall compound additive.

The center of the V does not require primer and only needs the finish paint to be brushed in.

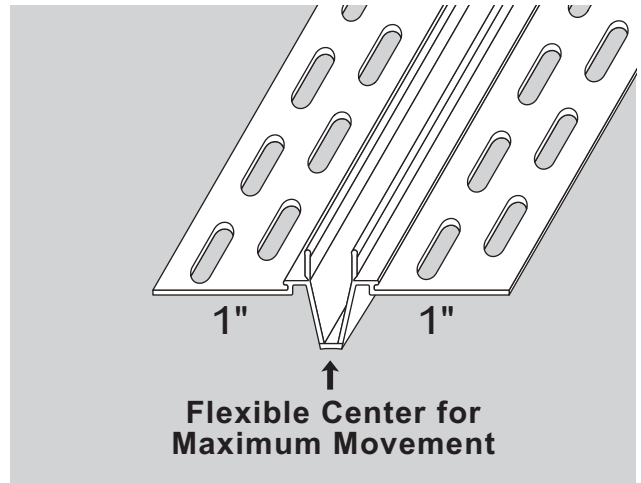


STOCK NUMBER	LENGTH	PCS PER BOX
093V	10'	20

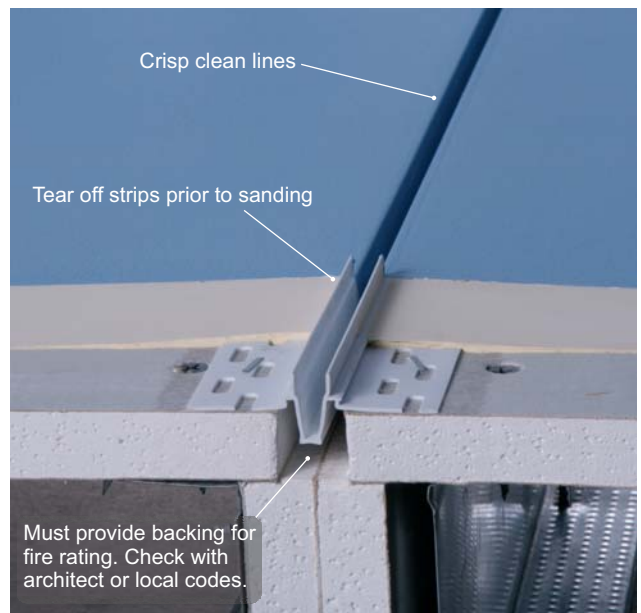

### Quick Tips

093V can be installed vertically above door jams to relieve stress and prevent cracking as show in the diagram to the right.

You can also do this on windows, garage ceilings and anywhere else you normally get cracking from load stress.

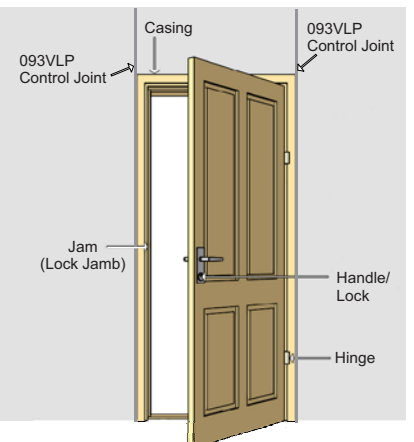

Stay Connected



[www.trim-tex.com](http://www.trim-tex.com) • 1-800-874-2333