




1-Hour Fire Bead®

Fast, simple and cost-effective, Fire Bead is the new go-to standard for firestopping in wall joints. Fire Bead provides protection for up to 1/2" of building deflection with cutting-edge firestopping technology to halt the passage of smoke, fire and sound.

Installation Guide

Technical Specs

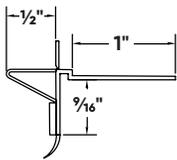

Scan Below for Installation Video



Before Installation:

Install drywall and leave a 1/2" gap between ceiling/adjacent structure and drywall. Measure, cut and dry fit the bead.

Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

Step 2:

Pressure the bead into place while ensuring that the bubble gasket is touching the ceiling/adjacent structure and is slightly compressed. Do not over compress the bubble gasket.

Step 3:

Staple every 6"-8" using 1/2" staples.


Step 4:

Finish with drywall compound. Remove tear-off strips prior to sanding.


Note:

There should be no gaps left in joints between pieces. Additional sealant may be used at butt joint to ensure seamless joints.


Step 1:

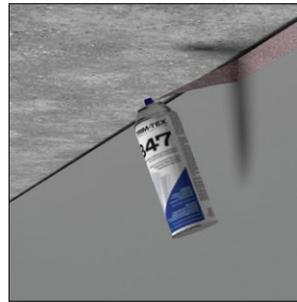

Step 2:

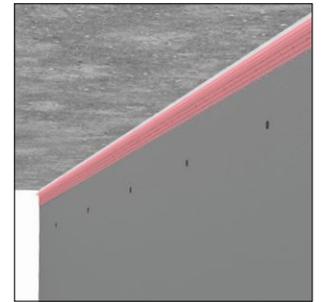

Step 3:

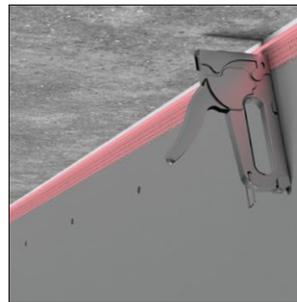

Step 4:

