


350 Bull® Kerfed Bead

Our kerf beads are an ideal solution to make drywall terminations into windows and doors, providing a clean contemporary look without traditional millwork. This profile is made with our smallest radius bullnose at $\frac{3}{8}$ ", and is a nice compliment to our 350 Bull family.



Installation Guide

Technical Specs

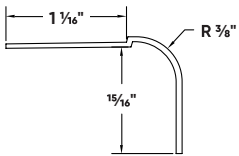

Scan Below for
Installation Video



Before Installation:

Use with pre-formed kerfed door and window jambs. Measure, cut and dry fit the bead, leaving a $\frac{1}{2}$ " gap at the floor.

Step 1:

Coat both the bead and drywall with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.

Step 3:

Staple every 6"-8" using $\frac{1}{2}$ " staples.

Step 4:

Finish with drywall compound.


Step 1:



Step 2:



Step 3:

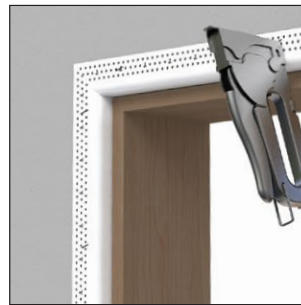

Step 4:

