


350 Chamfer® Archway Bead


A popular style among architects, finishers and interior designers alike, 350 Chamfer Bead gives your corners a modern look with crisp lines and stark shadows. The bead's tighter, $\frac{3}{4}$ "-wide chamfered edges can soften any room, and its easy-to-flex archway version to handle openings of any shape.

Installation Guide

Technical Specs

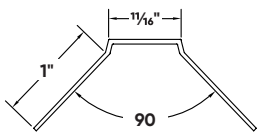

Setback: 350 Chamfer

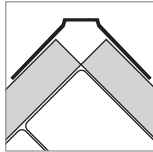

Scan Below for
Installation Video



Before Installation:

Ensure setbacks are even with the corner edge. Measure, cut and dry fit the bead, leaving a $\frac{1}{2}$ " gap at the floor.

Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.

Step 3:


Staple every 6"-8" using $\frac{1}{2}$ " staples.
Note: for smaller arches, stapling each tab may be necessary.

Step 4:


Finish with drywall compound.




Step 1:

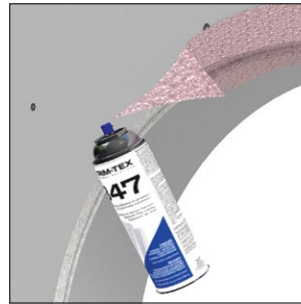

Step 2:

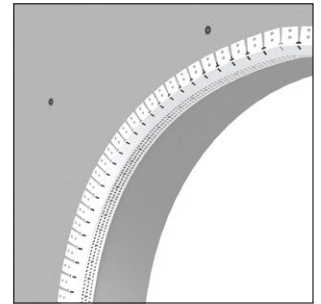

Step 3:

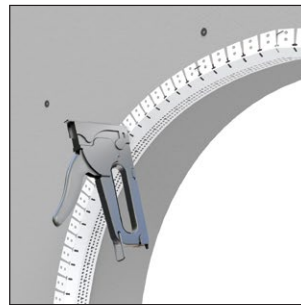

Step 4:

