




## Architectural Reveal Bead

Reveals are a great way to add interesting design elements to a bare wall – they give any room in which they're installed a sleek, modern and unique quality. Trim-Tex's Architectural Reveal Bead creates the sharpest, cleanest aesthetic reveals in drywall you can get, with 1/8" of built-in expansion control.

### Installation Guide

Technical Specs

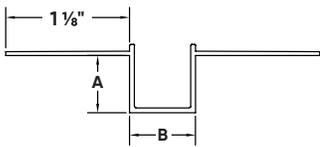

Scan Below for Installation Video



#### Before Installation:

Measure, cut and dry fit the bead.

#### Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

#### Step 2:

Press the bead in place, applying pressure to the mud legs.

#### Step 3:

Staple every 6"-8" using 1/2" staples.


#### Step 4:

Finish with drywall compound.

#### Step 1:



#### Step 2:

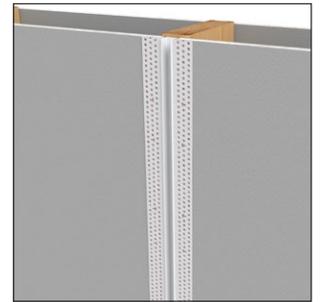

#### Step 3:



#### Step 4:

