



Jumbo Archway Bead

Jumbo Archway is a supersized tweak on our classic corner bead design, featuring a slight radius on its nose. The bead helps to prevent cracking on lofts, balconies and all bridging, with extra-wide 1 3/4" mud legs. With this single solution, you're able to finish up to two full layers of 5/8" drywall.

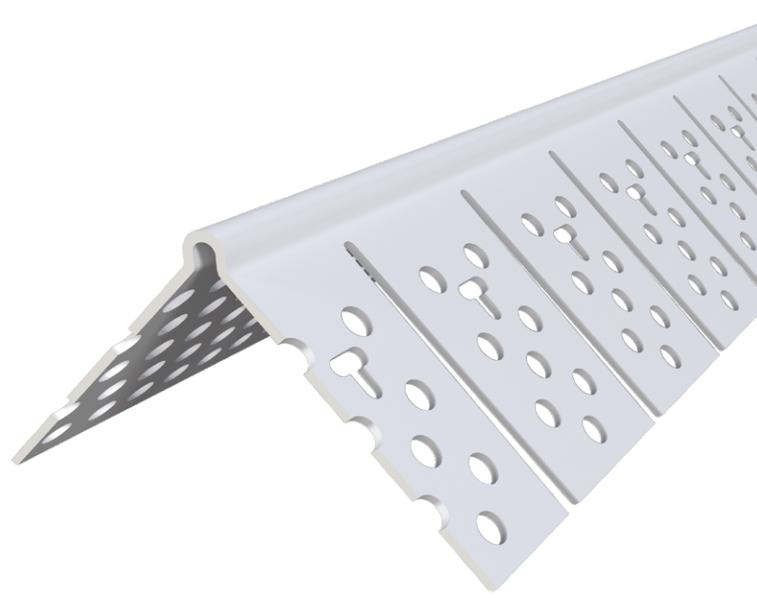

Installation Guide

Technical Specs

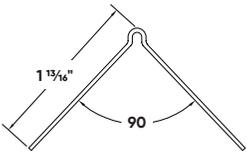

Setback: Standard



Scan Below for Installation Video



Before Installation:

Measure, cut and dry fit the bead, leaving a 1/2" gap at the floor.

Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.

Step 3:

Staple every 6"-8" using 1/2" staples.
Note: for smaller arches, stapling each tab may be necessary.


Step 4:

Finish with drywall compound.


Step 1:



Step 2:

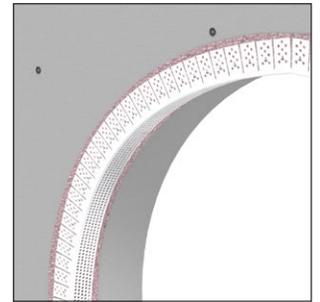

Step 3:

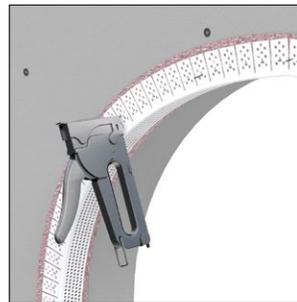

Step 4:

