


3/8" Medium Bullnose Kerfed Bead

A kerfed bead like this one is an ideal solution to make drywall terminations into windows and doors, providing a clean contemporary look without traditional millwork. This profile is made with a medium-sized 3/8" radius, and would work well alongside the rest of our 3/8" Medium Bullnose (formerly known as 350 Bull) family to complete the look throughout any room.



Installation Guide

Technical Specs

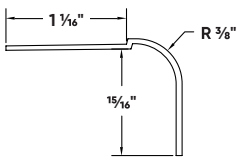

Scan Below for
Installation Video



Step 1:



Step 2:



Step 3:



Step 4:



Before Installation:

Use with pre-formed kerfed door and window jambs. Measure, cut and dry fit the bead, leaving a 1/2" gap at the floor.

Step 1:

Coat both the bead and drywall with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.

Step 3:

Staple every 6"-8" using 1/2" staples.

Step 4:

Finish with drywall compound.