


Medium Chamfer Bead®

A popular style among architects, finishers and interior designers alike, Medium Chamfer Bead gives your corners a modern look with crisp lines and stark shadows. The bead's tighter, $\frac{3}{4}$ "-wide chamfered edges can soften any room.


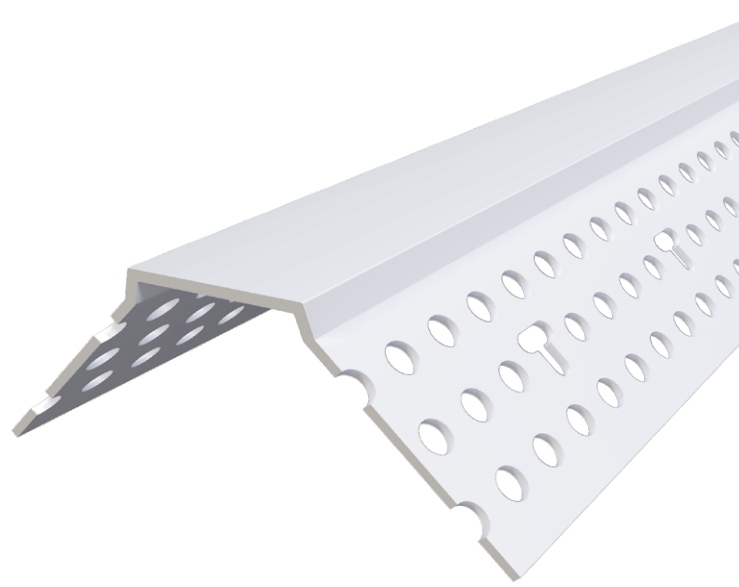


Installation Guide

Technical Specs

Setback: Medium Chamfer

Scan Below for
Installation Video

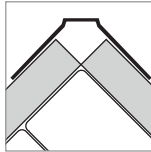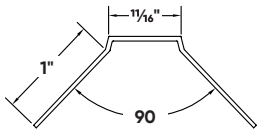

Before Installation:

Ensure setbacks are even with the corner edge. Measure, cut and dry fit the bead, leaving a $\frac{1}{2}$ " gap at the floor.

Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.

Step 3:

Staple every 6"-8" using $\frac{1}{2}$ " staples.

Step 4:

Finish with drywall compound.

Step 1:



Step 2:



Step 3:



Step 4:

