


Mud Set 350 Bull® Corner Bead

Mud Set Beads are the strongest and most impact-resistant corner solutions on the market, and this style offers all that durability in the form of a 350 Bullnose edge. This soft, rounded corner bead provides a unique style that is a safer alternative to 90-degree corner beads, great for schools and healthcare facilities.




Installation Guide

Technical Specs

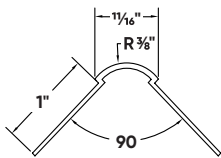

Setback: 350 Bull®

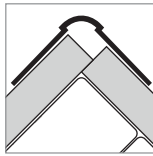

Scan Below for
Installation Video



Before Installation:

Measure, cut and dry fit the bead, leaving a 1/2" gap at the floor.

Step 1:

Apply compound to the bead using a hopper.

Step 2:

Press the bead in place, applying pressure using the Pro Series Quad Roller.


Step 3:

Wipe the surface of the bead to clean any excess mud.

Step 4:

Finish with drywall compound.

Step 1:

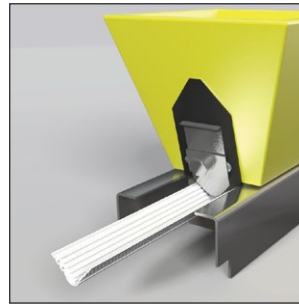

Step 2:



Step 3:



Step 4:

