


## Outside Splayed Corner Bead


Drywall finishers need to be prepared for more than just your average 90-degree corners, which makes a box or two of Splayed Corner Bead a downright necessary part of your inventory. This solution suits a range of splayed outside corner angles, from 120 degrees to 140 degrees.

### Installation Guide

Technical Specs



Setback: Standard

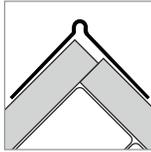

Scan Below for Installation Video



#### Before Installation:

Measure, cut and dry fit the bead, leaving a 1/2" gap at the floor.

#### Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

#### Step 2:

Press the bead in place, applying pressure to the mud legs.

#### Step 3:

Staple every 6"-8" using 1/2" staples.

#### Step 4:

Finish with drywall compound.



#### Step 1:



#### Step 2:



#### Step 3:



#### Step 4:

